



Frank Chen 2017.12.20 v1.0


# **OUTLINE**

#### Purpose

Description of the rules Modification for presenting variables --

Display node in the past can only write a variable, and variables and other strings can not coexist, the new version of HMI can use double quotation marks, so that the string and the coexistence of variables.


- > Equipment used TM5 HMI 1.64
- Situation description

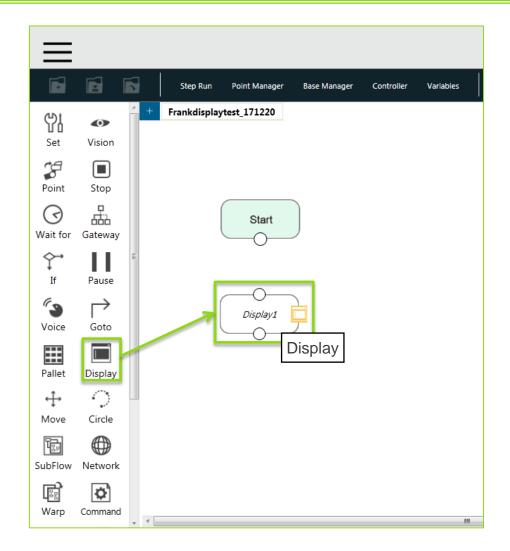







 Set a variable int var\_a = 0
The number of followers to want to display
1piece or 2piece or 3piece,,, etc.
in the Dashboard Display
With this idea you need to key in
var\_a+ piece.
in the Display Node Content input



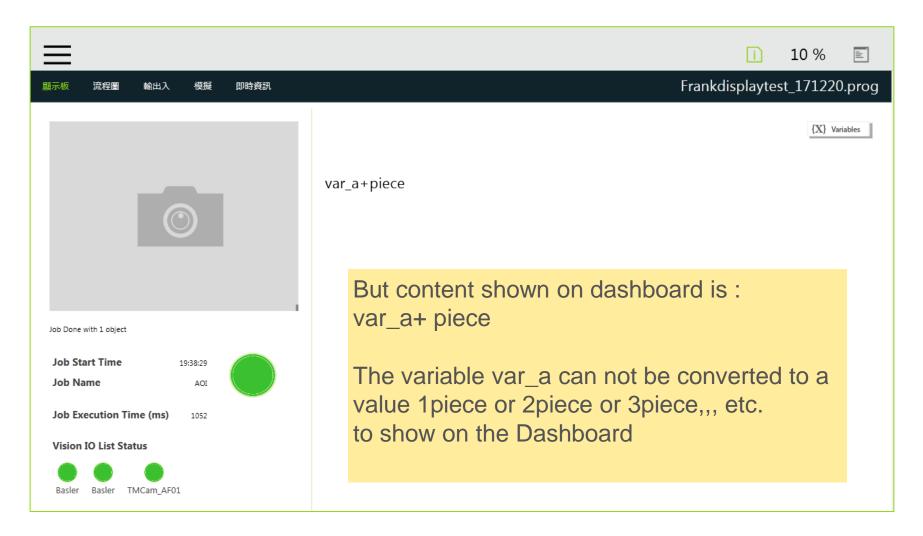




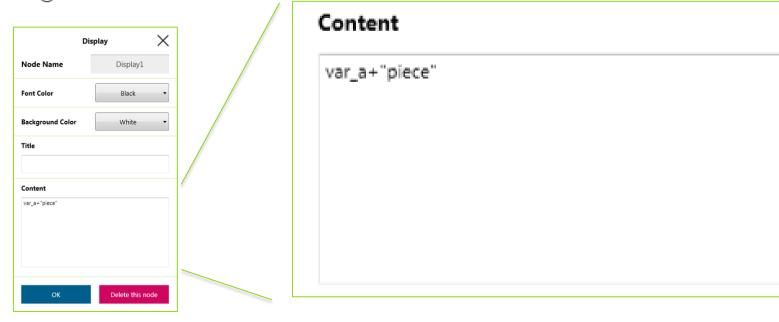


The new version of HMI will use double quotation marks with the string, So variables and strings can be presented at the same time,

 The variable var\_a can be converted to a value to show on the Dashboard 1piece or 2piece or 3piece,,, etc.





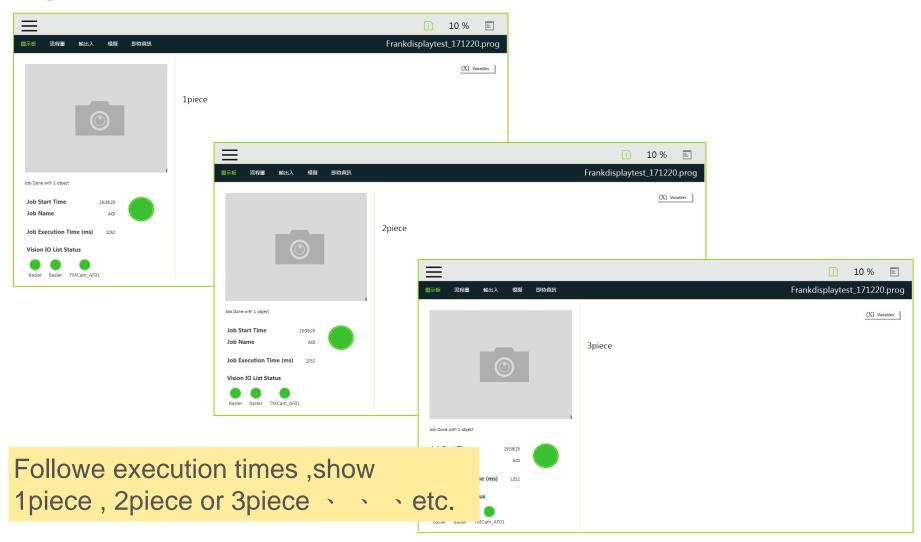

# **END**

